




PERSOONLIJKE VERZORGING
ANDER

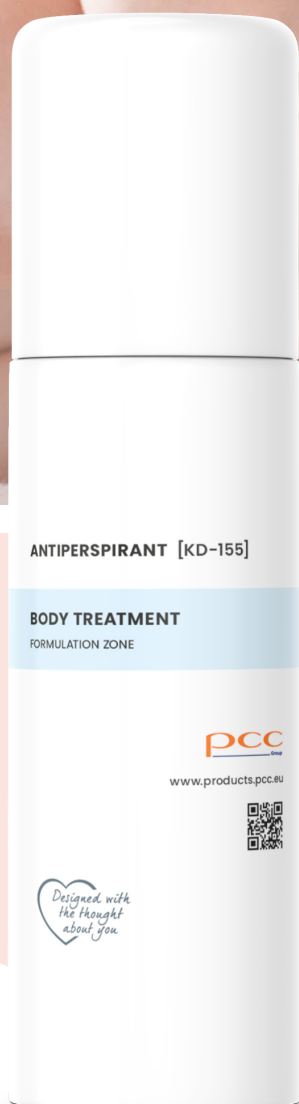

**ANTIPRANSPIRANT
[KD-155]**

ANTIPRANSPIRANT [KD-155]

FASE	INCI NAAM	MERKNAAM	CONCENTRATIE [%]	FUNCTIE
A	Aqua		80	oplosmiddel
	Hydroxypropyl Starch Phosphate		1	reologie modifierator
B	Cetearyl Alcohol, Cetareth-20	EXOcare®TE20-vlokken	5	emulgator
	PPG-15 Stearyl ether	ROKAnol® SP15L	4	verzachtend
C	Aluminum Chlorohydrate		10	anti-transpirant



stabiliteit	1 maand bij 5°C, 20°C, 40°C	bevestigd
Uiterlijk	visuele methode	witte emulsie
pH		3.5 – 5.0

Procedure:

1. Combineer in aparte vaten de ingrediënten van fase A en B. Homogeniseer fase A: 1500-2000 RPM 90-120 s.
 2. Verwarm fase A en B tot 75-80°C.
 3. Voeg tijdens het mengen fase B toe aan A. Homogeniseren: 1500-2000 RPM 90-120 s.
4. Koel de batch af tot 30°C terwijl u mengt.
 5. Voeg tijdens het mixen fase C-ingrediënt toe. Homogeniseren: 1500-2000 RPM 90-120 s.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform
to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

