




CUIDADO PESSOAL

TRATAMENTO CORPORAL

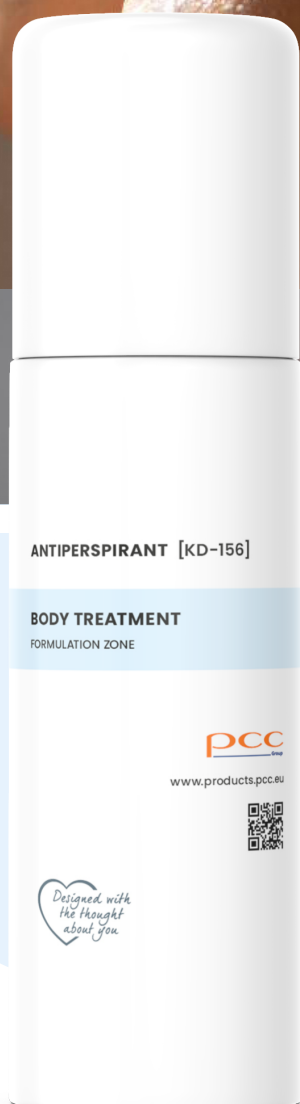

ANTIPERSPIRANTE [KD-156]

ANTIPERSPIRANTE [KD-156]

ESTÁGIO	NOME DA INCI	MARCA	CONCENTRAÇÃO [%]	FUNÇÃO
A	Aqua		até	solvente
B	Ceteareth-25, Cetearyl Alcohol	EXOcare®TE25 Flocos	3,0	emulsificante
	PPG-15 Stearyl ether	ROKanol® SPI5L	5,0	emoliente
	Steareth-20	ROKanol®S20	3,0	emulsificante
C	Aluminum Chlorohydrate		15,0	antiperspirante
	Parfum		0,5	fragrância



estabilidade	1 mês a 5°C, 20°C, 40°C	confirmado
Aparência	método visual	emulsão branca
pH		3,5 – 5,0

Procedimento:

1. Em recipientes separados, combine os ingredientes das fases A e B. Homogeneize a fase A: 1500-2000 RPM 90-120 s.
 2. Aqueça as fases A e B a 75-80°C.
 3. Adicione a fase B a A enquanto mistura. Homogeneizar: 1500-2000 RPM 90-120 s.
4. Resfrie o lote a 30°C enquanto mistura.
 5. Adicione o ingrediente da fase C enquanto mistura. Homogeneizar: 1500-2000 RPM 90-120 s.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform
to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

