




개인 관리
페이스 트리트먼트

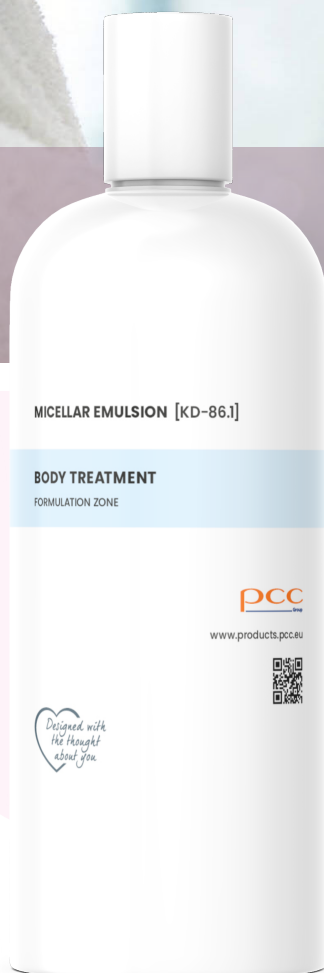

미셀라 에멀전 [KD-86.1]

미셀라 에멀전 [KD-86.1]

단계	INCI 이름	상표명	집중 [%]	기능
A	Aqua		up to	용제
	Methylparaben		0,25	예방법
	Ethylparaben		0,25	예방법
	Glycerin		0,20	용제
	Cetearyl alcohol	ExoAlc 1618 플레이크	2,40	유화 안정제
	Stearic Acid		0,30	유변학 개질제
	Sodium Lauryl Sulfate	ROSulfan®L	1,50	계면활성제



산도	5.0 - 7.0		
외관	시각적 방법	화이트 에멀전	
안정성	5°C, RT, 40°C에서 1개월	확인	

절차:

1. 메인 용기에 재료를 결합합니다. 혼합하면서 75-80°C로 가열합니다. 800-1200 RPM, 90초로 균질화합니다.

2. 혼합하는 동안 배치를 50°C로 식힙니다. 800-1200 RPM, 60초로 균질화합니다.
3. 혼합하는 동안 배치를 25°C로 식힙니다. 800-1200 RPM, 30초로 균질화합니다.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform
to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

