




CUIDADO PERSONAL
TRATAMIENTO FACIAL

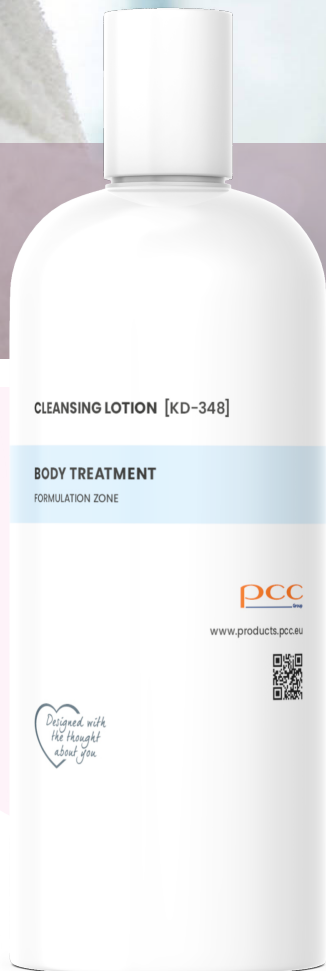

LOCIÓN LIMPIADORA
[KD-348]

LOCIÓN LIMPIADORA [KD-348]

FASE	NOMBRE INCI	NOMBRE DE LA MARCA	CONCENTRACIÓN [%]	FUNCIÓN
A	Aqua		hasta	solvente
	Benzyl Alcohol, Ethylhexylglycerin, Tocopherol		0,60	preservativo
	Sclerotium Gum, Xanthan Gum		0,25	modificador de reología
	Lactic Acid		0,20	ajustador de pH
B	Helianthus Annuus Seed Oil		6,00	emoliente
	Cetearyl alcohol	Copos de ExoAlc 1618	3,50	estabilizador de emulsión
	Polysorbate 80	ROKwinol 80	3,00	emulsionante
	PPG-15 Stearyl ether	ROKAnol® SPI5L	6,00	emoliente
	PPG-5-Ceteth-20	ROKAnol MB	2,00	emoliente
	Potassium Cocoate	EXOsoft PC35	2,00	surfactante
	Potassium Oleate	EXOsoft PO30	3,00	surfactante



Estabilidad	1 mes a 5°C, TA, 40°C	confirmado
aparencia	emulsión método visual	emulsión
pH		7.5 - 8.5

Procedimiento:

1. En un recipiente principal combine los ingredientes de la fase A. Caliente la fase A a 75-80°C mientras mezcla.
2. En un recipiente aparte, combino los ingredientes de la fase B.
3. Calentar la fase B a 75-80°C.
4. Agregue B a A, revuelva bien, mantenga A/B a 75-80°C. Homogeneizar con 2000-3000 RPM, 90 seg.
5. Enfriar el lote a 30°C mientras se mezcla.
6. Agregue EXOsoft PC35, EXOsoft PO30 – mezcle hasta que quede uniforme.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

