




SOINS PERSONNELS
TRAITEMENT DU CORPS

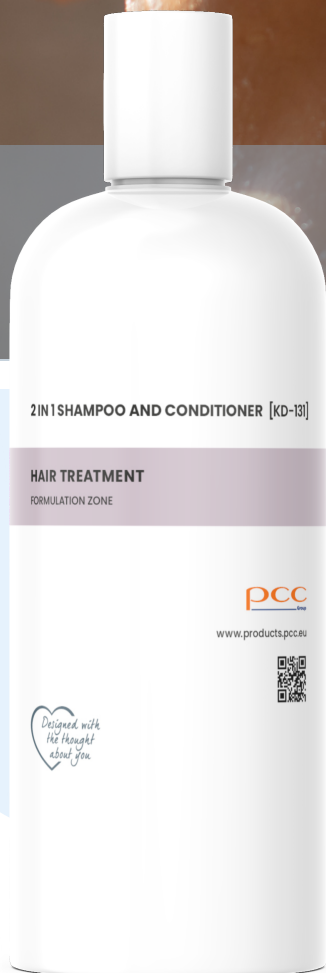

**SHAMPOING ET
APRÈS-SHAMPOING 2 EN
1 [KD-131]**

SHAMPOING ET APRÈS-SHAMPOING 2 EN 1 [KD-131]

PHASE	NOM INCI	MARQUE	CONCENTRATION [%]	FONCTION
A	Aqua		jusqu'à	solvant
	Sodium Laureth Sulfate	SULFOROKAnol® L227/1	12,00	tensioactif
	Zinc Coceth Sulfate	exosoft-zn	20,00	tensioactif
	Polyquaternium-7		1,00	filmogène
B	Aqua, Sodium Benzoate, Potassium Sorbate		0,50	conservateur
	Allantoin		0,01	actif
	CI 77891, Mica		0,01	colorant
	PEG-7 Glyceryl Cocoate	rokacet-ko300g	0,50	tensioactif
	PEG-120 Methyl Glucose Dioleate		1,00	épaississant
C	Glycerin		0,45	solvant
	Xanthan Gum		0,20	modificateur de rhéologie
D	Sodium Laureth Sulfate and Cocamide DEA and Glycol Distearate	EXOpearl N	1,00	tensioactif
E	Parfum		0,50	fragrance
F	Cocamidopropyl Betaine	ROKAmina®K30	6,00	tensioactif
G	Sodium Chloride		0,50	épaississant



pH		4.7 - 5.5
Apparence	méthode visuelle	gel perlant
Viscosité [cP]	Brookfield LV, broche 34, vitesse 3,0 RPM, T : 25°C	5000 - 12000
Stabilité	1 mois à 5°C, 20°C, -5/40°C	confirmé

Procédure:

1. Dans un récipient principal, combiner les ingrédients de la phase A - mélanger jusqu'à homogénéité (solution trouble). Dans un récipient séparé, combiner les ingrédients de la phase C - mélanger jusqu'à homogénéité.
2. Préparez le reste des ingrédients dans des béchers séparés.
3. Ajouter les ingrédients de la phase B – mélanger jusqu'à homogénéité.
4. Ajouter les ingrédients de la phase C tout en mélangeant - mélanger jusqu'à homogénéité.
5. Ajouter les ingrédients de la phase DF tout en mélangeant - mélanger jusqu'à homogénéité.
6. Ajouter lentement le chlorure de sodium tout en mélangeant - mélanger jusqu'à homogénéité.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform
to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

