

## PERSONAL CARE BODY TREATMENT

# DEEPLY CLEANSING BODY MOUSSE [RD-21]



### DEEPLY CLEANSING BODY MOUSSE [RD-21]


PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
Α	Sodium Cocoyl Isethionate		17,000 - 17,000	surfactant
	Disodium Laureth Sulfosuccinate	EXOsoft L3/40	2,700	surfactant
	Cocamidopropyl Betaine	ROKAmina®K30	1,500 - 0,000	surfactant
	Aqua		61,200	solvent
В	Glycerin		12,000	active
	Sorbitol		4,000	active
	Panthenol		0,500	active
С	Parfum		0,400	fragrance
	CL 42090		0,002	colorant
D	Sodium Benzoate		0,500	preservative
	Potassium Sorbate		0,300	preservative
E	Lactic Acid		0,300	pH modifier



Stablility	1 month in 5°C, 20°C, 40°C	confirmed
Apperance	visual method	blue paste
рН		5.0 - 5.5

#### **Procedure:**

- 1. Add ingredients from phase A to warm water (40-45°C). Mix until homogenous solution is obtained.
- 2. Cool the batch down to at least 35°C.
- 3. Add phase B during mixing. Mix until homogenous solution is obtained.
- 4. Add phase C-E ingredients while mixing- mix until uniform.
- 5. Adjust the pH with lactic acid to a pH of 5.0-5.5.

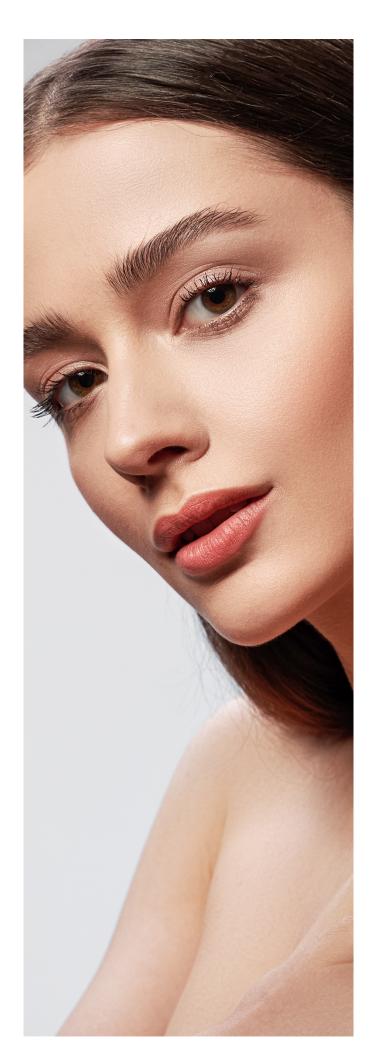



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

#### www.products.pcc.eu

PCC Group Sienkiewicza 4 56-120 Brzeg Dolny Poland

e-mail: products@pcc.eu

