




CUIDADO PESSOAL

TRATAMENTO CORPORAL

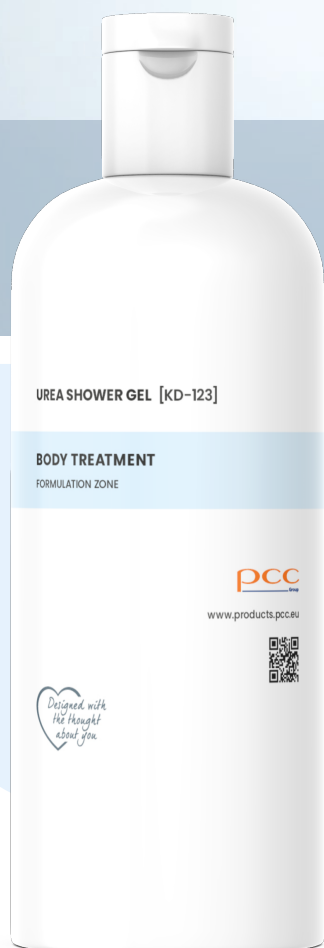

GEL DE DUCHE DE UREIA  
[KD-123]

# GEL DE DUCHE DE UREIA [KD-123]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		até	solvente
	Sodium Laureth Sulfate, Cocamide MEA	EXOcare	5,0	surfactante
	Sodium Laureth Sulfate	SULFOROKAnol®L270 / 1	8,0	surfactante
	Glycerin		2,0	solvente
	Aqua, Sodium Benzoate, Potassium Sorbate		0,7	conservante
	Lactic Acid		1,0	ajustador de pH
	Sodium Lactate		1,4	ajustador de pH
	Arginine		0,5	ativo
	Urea		4,0	umectante
B	Parfum		0,5	fragrância
C	Cocamidopropyl Betaine	ROKamina®K30	6,0	surfactante
	Sodium Chloride		1,5	espessante



pH		4.7 - 5.7
Aparência	método visual	gel
Viscosidade [cP]	Brookfield LV, fuso 34, velocidade 3,0 RPM, T: 25°C	2500 - 10000
estabilidade	1 mês a 5°C, 20°C, -5/40°C	confirmado

## Procedure:

1. No recipiente principal, misture os ingredientes da fase A – misture até ficar homogêneo (solução turva).
2. Prepare os ingredientes restantes em copos separados.
3. Adicione o Parfum – misture até ficar homogêneo.
4. Adicione ROKamina K30 lentamente enquanto mistura – misture até ficar homogêneo.
5. Adicione lentamente o cloreto de sódio enquanto mistura – misture até ficar homogêneo.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

[www.products.pcc.eu](http://www.products.pcc.eu)

PCC Group  
Sienkiewicza 4  
56-120 Brzeg Dolny  
Poland

e-mail: [products@pcc.eu](mailto:products@pcc.eu)

