



## PERSONAL CARE BODY TREATMENT



FOAM FOR INTIMATE HYGIENE [KD-07]

## FOAM FOR INTIMATE HYGIENE [KD-07]


PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
А	Aqua		up to	solvent
	Glycerin		4,00	moisturising agent
	Magnesium Laureth Sulfate	EXOsoft MG	4,00	surfactant
	Disodium Laureth Sulfosuccinate	EXOsoft L3/40	4,00	surfactant
	Betaine		0,50	active
	Sodium Benzoate, Potassium Sorbate		0,50	preservative
	Lactic Acid		q.s.	pH adjuster
В	Panthenol		0,10	active
	PEG-120 Methyl Glucose Dioleate		0,25	thickener
С	Cocamidopropyl Betaine	ROKAmina®K30	2,00	surfactant
	Parfum		0,20	fragrance



рН		4.0 - 4.5
Apperance	visual method	visual method bright- yellow
Stablility	1 month at 5°C, RT, 40°C	confirmed

## **Procedure:**

- 1. In a main vessel combine ingredients from phase A. Add ingredients from phase A to warm water (40-45°C). Mix until uniform.
- 2. Add PEG-120 Methyl Glucose Dioleate and Panthenol. Mix until uniform. Cool the batch down to at least 30°C.
- 3. Add Cocamidopropyl Betaine and Parfum during mixing. Mix until uniform.
- 4. If nessesery, adjust pH by Lactic Acid to 4.0 4.5.

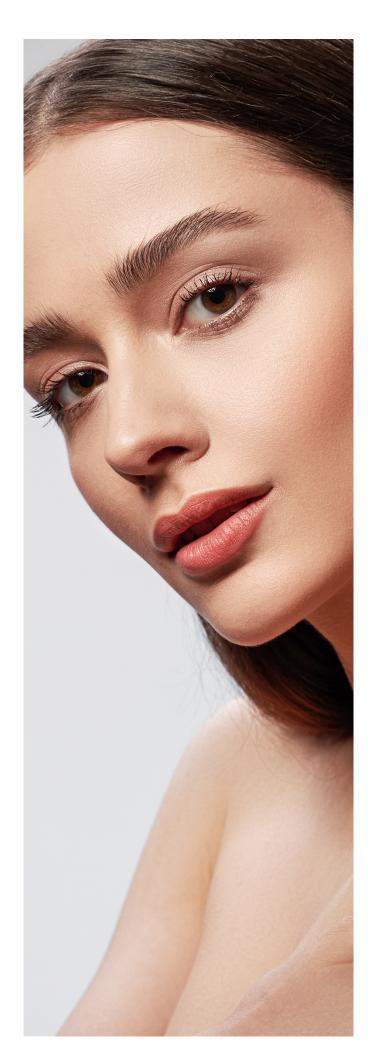



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

## www.products.pcc.eu

PCC Group Sienkiewicza 4 56-120 Brzeg Dolny Poland

e-mail: products@pcc.eu

