




PERSONAL CARE
BODY TREATMENT

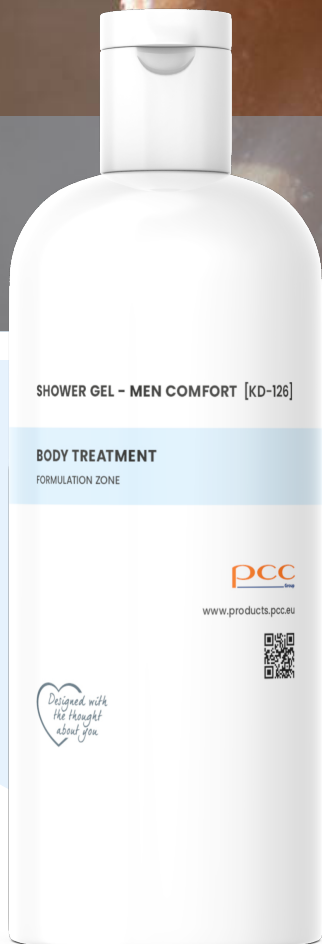

**SHOWER GEL – MEN
COMFORT [KD-126]**

SHOWER GEL – MEN COMFORT [KD-126]

PHASE	INCI NAME	BRAND NAME	CONCENTRATION [%]	FUNCTION
A	Aqua		up to 100,000	solvent
	Sodium Laureth Sulfate, Cocamide MEA	EXOcare®ML70	19,000	surfactant
B	Acrylates Copolymer		6,000	rheology modifier
	Aqua		6,000	solvent
C	Sodium Hydroxide		0,200	pH adjuster
	Phenoxyethanol, Methylparaben, Ethylparaben, Propylparaben		0,800	preservative
D	Sodium Chloride		0,500	UV absorber
E	Petrolatum		3,000	emollient
F	Parfum		0,500	fragrance
G	CI 42090		0,005	colorant



pH		6.0 - 7.5
Apperance	visual method	blue, viscous gel
Stability	1 month at 5°C, 20°C, 40°C	confirmed

Procedure:

1. Combine ingredients from phase A and B in separate vessel – mix until uniform.
2. Add slowly phase B to phase A during mixing – mix until uniform. In separate vessels prepare other ingredients.
3. Add preservative and pH adjuster during mixing – mix until uniform.
4. Add Sodium Chloride while mixing – mix until uniform.
5. Add phase E,F,G while mixing – mix until uniform.



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group
Sienkiewicza 4
56-120 Brzeg Dolny
Poland

e-mail: products@pcc.eu

