

PERSONAL CARE BODY TREATMENT

REFRESHING MOUSSE FOR BODY WASHING [RD-17]




REFRESHING MOUSSE FOR BODY WASHING [RD-17]

PHASE	INCI	BRAND NAME	CONCENTRATION [%]	FUNCTION
Α	Aqua		54,600	solvent
	Sodium Cocoyl Isethionate		21,000	surfactant
	Decyl Glucoside		1,200	surfactant
	PEG-4 Rapeseedamide	ROKAmid MRZ4	3,000	surfactant
	Coco-betaine	ROKAmina®K30B	1,000	surfactant
В	Glycerin		11,000	active
	Sorbitol		6,000	active
	Betaine		0,400	active
С	Parfum		0,300	fragrance
	CL 15510		0,001	colorant
	CL 45100		0,001	colorant
	Mentha Piperita Leaf Extract		0,400	active
D	Sodium Benzoate		0,500	preservative
	Potassium Sorbate		0,300	preservative
E	Lactic Acid		0,300	pH modifier

•	Stablility	1 month in 5°C, 20°C, 40°C	confirmed
	Apperance	visual method	red paste
E	рН		5.0 - 5.5

Procedure:

- Add the ingredients of phase A to warm water (40-45°C). Stir until a homogeneous solution is obtained.
- 2. Cool the batch to a temperature of at least 35°C.
- 3. Add the ingredients of phase B, stirring constantly. Stir until a homogeneous solution is obtained.
- 4. Add the ingredients of phase C-E while stirring. Mix until a uniform consistency is obtained.
- 5. Adjust the pH to 5.0-5.5 with lactic acid.

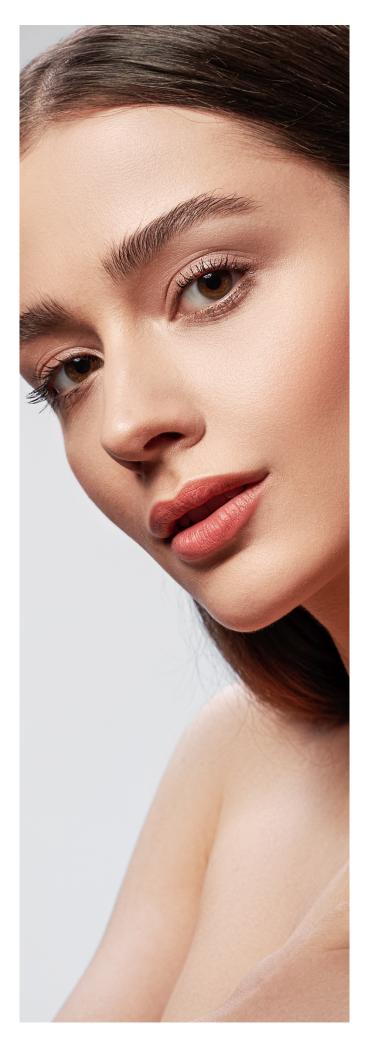



The information in the catalogue is believed to be accurate and to the best of our knowledge, but should be considered as introductory only. Detailed information about products is available in TDS and MSDS. Suggestions for product applications are based on our the best of our knowledge.

The responsibility for the use of products in conformity or otherwise with the suggested application and for determining product suitability for your own purposes rests with the user.

All copyright, trademark rights and other intellectual and industrial property rights and the resulting rights to use this publication and its contents have been transferred to PCC Rokita SA, PCC EXOL SA and other companies of the PCC Group or its licensors. All rights reserved.

Users/readers are not entitled to reproduce this publication in whole or in part, nor are they entitled to reproduce it (excluding reproduction for personal use) or to transfer it to third parties.

Permission to reproduce it for personal use does not apply in respect to data used in other publications, in electronic information systems, or in other media publications. PCC Rokita SA and PCC EXOL SA shall not be responsible for data published by users.

Please visit our capital group business platform to check full range of products for personal care.

www.products.pcc.eu

PCC Group Sienkiewicza 4 56-120 Brzeg Dolny Poland

e-mail: products@pcc.eu

